



TVRC8N-MP

8 IN 1 Remote Control

Operating Instructions
And Device Codes



Contents

Batteries	3
Button functions	4
A.GENERAL	
FUNCTION	7
LED lash	7
Code Stored.....	7
Others.....	7
B.MANUAL SETUP	8
C. QUICK/AUTO POWER SEARCH	
SETTING	9
D. Two Keys' Set up Way: (Power Quick Search)(Only for TV)	11

Codes

TV	13
SAT	31
VCR	34
CABLE	39
DVD	39
NEW AUX	41


Batteries

This product requires 2 AAA/LR03 Alkaline buttons.

1. Slide the battery cover in the direction of the arrow away from the body of the remote control.
2. Insert the batteries into the remote control as indicated in the battery compartment.
3. Refit the cover.

After replacement of the batteries it will be necessary to re enter the codes for your devices use the inside rear page to record your code numbers for your devices.

Button Function

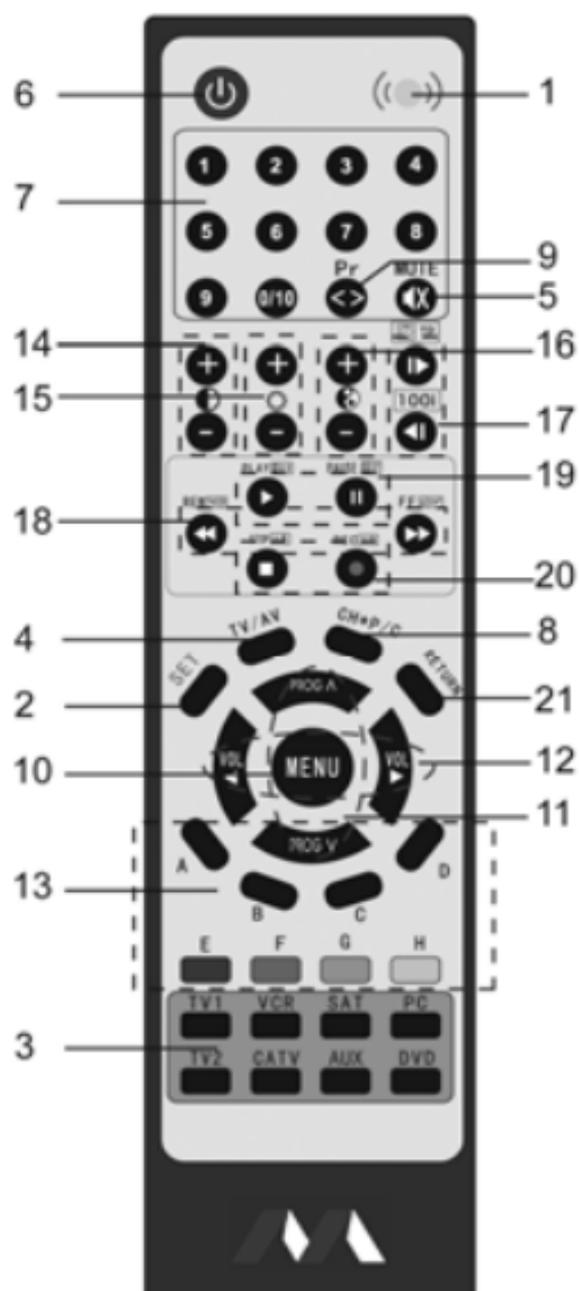

- 1. LED**
LED blinks to show that the remote control is working.
- 2. SET**
Use SET for all programming sequences.
- 3. Device Keys**
Press TV1, VCR, SAT, PC, TV2, CATV, AUX, DVD once to select a home entertainment component to control.
- 4. TV/AV (Note 1)**

- 5. Mute**
This key turns sound off or on.
- 6. Power**
This key switches device on and off.
- 7. Number keys**
These operate as they did on your original remote control. The 0/10 is for entering numbers between 10 and 19, press 0/10 first then select the second number from the main key numbers.
- 8. CH*P/C (Note 1)**
Channel/Program (LCR)
- 9. Pr ◀▶: Program**
- 10. Menu (Note 1)**
Access the menu of your chosen component.
- 11. PROG+/-**
Select Next / Previous Channel.
- 12. VOL+/-**
Control the volume of the Device.
- 13. Fast Text buttons (Note 1)**
These operate the fast text on your TV as with your original remote control.
- 14/15/16. (Note 1)**
Contrast +/-: Increase/decrease
Picture Contrast
Brighten +/-: Brighten/Darken the

Picture

Color +/-: Increase/decrease Color
Intensity

17/18/19/20 (Note 1)

This operates the VCR when selected.

◀◻ / ◻▶ : Slow Backward / Forward

◀◀ / ▶▶ : Fast Backward/ Forward

▶ / ◻◻: Play / Pause

◻ / ●: Stop / Record

21. Return (Note. 1)

Note 1.

For compatibility with many different types of equipment some buttons may have no effect. They will only operate if this was a function on your original remote control.

A. GENERAL FUNCTION

LED Flash

1. After power on, LED will be flashed one time.
2. When key is pressed, LED flash means that it has data transition. If LED does not flash, it means that it is no data transition.
3. If the key is a function key, such as Device Key, LED will flash.
4. In Quick Power Searching Mode, LED will flash by 1 Hz.
5. In Auto Power Searching Mode, LED will flash by 2 Hz.

Code Stored

1. For the **Manual Setup Mode**, all brand code can be stored in any Device (E.g. TV1, VCR, DVD, etc.)
2. For the **Quick Power Search Mode**, it can search their device's code range only. (E.g. TV, search range is from 000 to 230).

Others

1. For any Device, it can control the VOL+/-, Mute, TV/AV of the last TV code setup.

B . MANUAL SETUP

1. Look up the three-digit code for your brand and type of equipment in the code tables.
2. Press the **SET Key and Device Key** which you want to control at the same time, then the indicator lights will turn on.
3. Press the **three digit** code for your equipment. Each time LED blinks one time.
4. If the LED turns off, it indicates that the code is accepted. Press the [POWER] button to see if it can turn off the device, If ok,it indicated the code it is correct code, then check the other button of the remote are operating the corresponding functions of the device. If not, please repeat from the first step.
5. If the LED still on, it indicates that the code is wrong. You need exit the setting mode and restart the process.
Example: Philips TV, Code 003

Note:

1. If no key on your remote is pressed for 10 seconds, the programming process will stop automatically, and you will have to start over.
2. Exit the setting mode: Press any device key in the setting process. LED turn off.

C. QUICK/AUTO POWER SEARCH SETTING

1. Turn on the device you want to control, and point the remote toward it.
2. Press the **SET Key and Device Key** simultaneously, then the indicator light will turn on.
3. Press and release the [SET] Key. LED will flash. It stands for entering the Power Search Mode.
4. For Quick Power Search Mode: Press and release [POWER] key repeatedly. Each time you press the [POWER] Key, a new code number will be transmitted. Keep trying until your Device operates by receiving the transmitted signal. (You can power on the device again by hand and test the PROG+ function works, playback starts, etc.) Be patient as you do this; it may take about more than 100 tries until the correct code number is located.
5. For Auto Power Search Mode: Hold the [POWER] key over 3 seconds in step 4. LED will turn on and then flash by 2 Hz. You can release the [Power] key. Code will be transmitted one by one automatically. If you find that the equipment is Power OFF, you can press any key to stop the Auto Power Searching.

6. If you want to change the direction of the searching mode, you can press and release the [SET] key. (Only for Quick Power Search Mode).
7. When the correct code is found, press and release any DEVICE Key to store the code number. LED will turn off.

Note:

- If no key on your remote is pressed for 30 seconds, the programming process will stop automatically, and you will have to start over.
- If the LED indicator is off on the setting mode, it stands for stop the setting mode.
- If the code is not match with your equipment, then repeat step 1 to 7.
- If the code searching is going to the end or the first code, it will stop and exit the setting mode automatically.

D. Two Keys' Set up Way: (Power Quick Search) (Only for TV)

1. Turn on the TV and point the remote toward it
2. Press **PROG+** & **VOL-** buttons simultaneously for about 2 seconds until LED flashes. It stands for entering the **Quick Search Mode**.
3. Slowly press the **POWER** key repeatedly until the TV turns off. When this happens a correct code may have been found. Turn your TV on again and test functions **PROG+**, **PROG-**, **VOL+**, **VOL-**. If these functions do not work correctly it is necessary to find another code from the available library until all the functions work.
4. When all the functions work, it can exit the setup function by pressing the keys **PROG+** & **VOL-** simultaneously for about 2 seconds until LED turns off. This will save the code for your TV.

Note:

1. Each time you press the **POWER** key, it will skip to the next code and transmit a Power signal to turn off your TV.
2. If you fail to stop pressing the **POWER** key when your TV has switched off, switch your TV on again manually and press the "**MUTE**" 2 times and press

Power. It can send one previous code data. Repeat to press Mute twice & Power until the TV off again. Then, press PROG+ & VOL- to lock in the code.

3. If no key on your remote is pressed for 30 seconds, the programming process will stop automatically, and you will have to start over.
4. For the quick search function, it will stop after searching one cycle from stored code.
5. Auto Power Search Mode doesn't function on this Mode.

CODE REFERENCE

TV				
SAT				
VCR				
CABLE				
DVD				
NEW AUX				